

Chateau Wall™ Installation

Chateau Wall™ is an easy to use retaining wall system that utilizes four different sized units which can be used individually or in combination. This unique product can be used for retaining walls, fences, columns and steps to produce a very unique satisfying project.

Step 1: Planning Your Project

Prepare a layout for your Chateau Wall™ project on paper. Projects that are over 3' high should use qualified advice or an engineer. Determine the face square feet of wall and any columns you will have. When calculating wall face square footage, remember that you will have at least 4" of the first layer of block buried below the finished soil height. Decide what block sizes you want to use and then use the pattern chart to calculate the quantity of each product size you need. Also consider the type of caps you would like to use. Mark out on the ground the parameters of the project. To help with curves, use a garden hose or PVC pipe. Use a string line to lay out long straight areas of the project.

Step 2: Preparing the Base

Excavate the soil 8" to 10" below grade and at least 4" wider on each side than the blocks you are laying. Refer to the installation diagrams for details and better understanding on varied types of projects. With unstable soils, increase the depth of excavation as required to allow for a deeper base. Place ¾" minus gravel into the excavation area to a minimum depth of 4" to 6" and level it. Next, compact the gravel with a hand tamper or plate compacter. Make sure that you have a minimum of 6" of excavation behind the wall for gravel back fill. This may need to be increased, depending on soil type.

Step 3: Positioning the Bottom Course


Set the bottom course of block at the desired position on top of the prepared gravel. Using a large rubber mallet and a level, adjust the block until it is level, end to end, and front to back. Set the adjacent blocks in the same manner, using a string line or a level to keep long runs straight and flat.

Step 4: Building and Backfilling


Place two ¾" beads of Western Interlock approved flexible construction adhesive on top of the base course. Set the next course of block on top of the adhesive, offsetting the joints between the blocks on each consecutive course, and continue in this manner along the entire length of the wall. Retaining walls require a set back of ¾" per course to obtain the necessary set back angle. Accomplish this by using a square ¾" piece of wood or a tape measure to space each block back the required amount. Continue this process one layer at a time until the desired height is obtained. Retaining walls require backfill of ¾" minus gravel to within 6" of the finish height. Backfill and compact behind each course as the wall is built. Use a masonry saw to make any necessary cuts.

Step 5: Finishing the Wall


The Chateau Wall™ does not require a separate cap; however, there are several options if a cap is desired. Any of the Western Interlock paving stones that have a width of 8" or more can be used, as can any of the Chateau Wall™ blocks. Large post caps for columns are also available from Western Interlock.

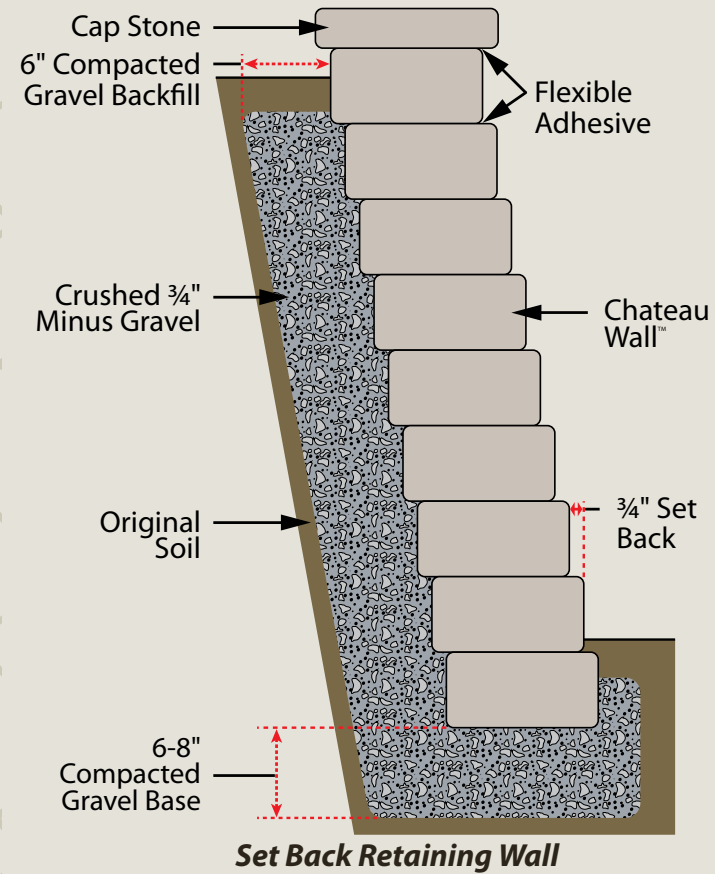


Set Back Retaining Wall

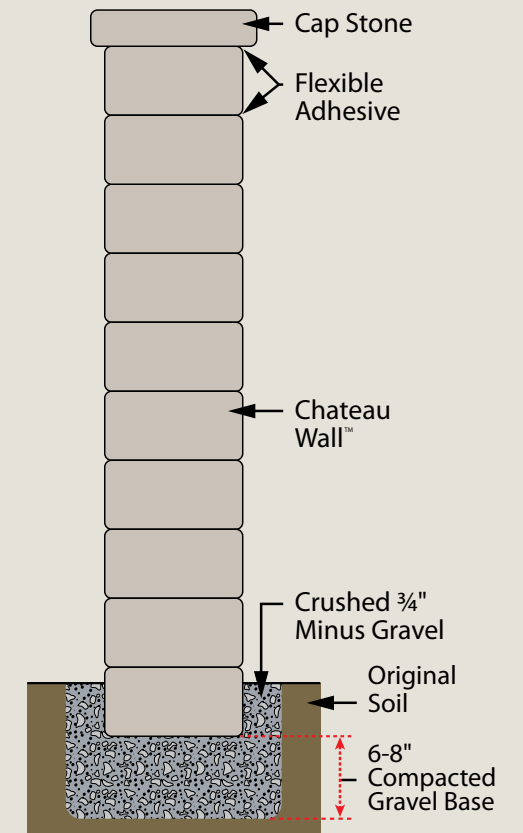


Non-Retaining Vertical Wall

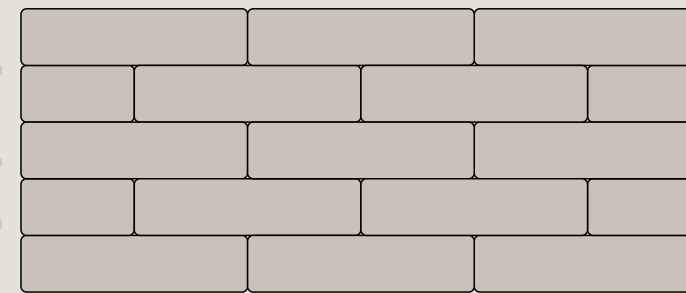


Half Bond: 100% 400mm blocks w/ 1 or 2 200mm block starter blocks per course

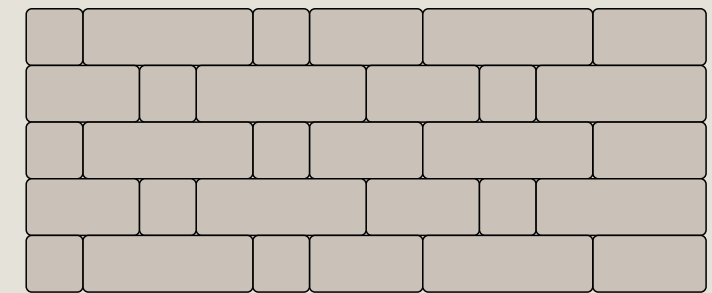

Bond: 50% 300mm, 33% 200mm & 17% 100mm blocks

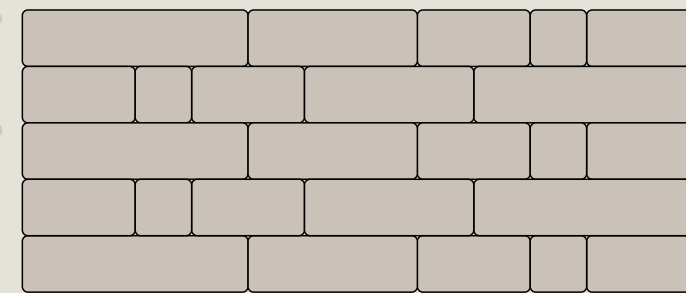


Bond: 40% 400mm, 30% 300mm, 20% 200mm & 10% 100mm blocks

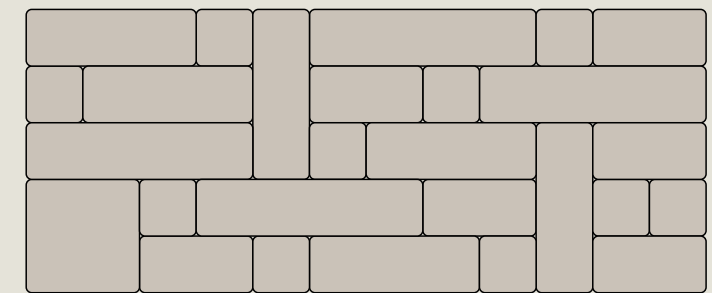


Random: Various 400mm, 300mm, 200mm & 100mm blocks w/ jumper blocks

Four Block 20" Column

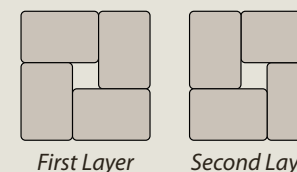


First Layer Second Layer

Four Block 24" Column

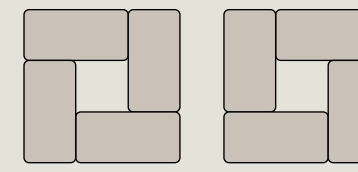

First Layer Second Layer

Column Tie In To Wall

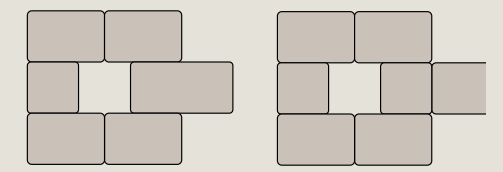

First Layer Second Layer